



Mission Block and Slat Sub-Assembly (continued)

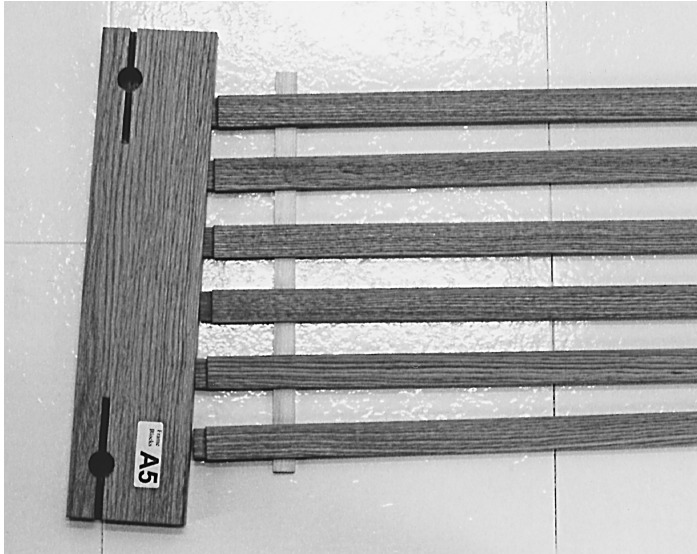

Insert ends of 6 Slats into one of the Frame Blocks.

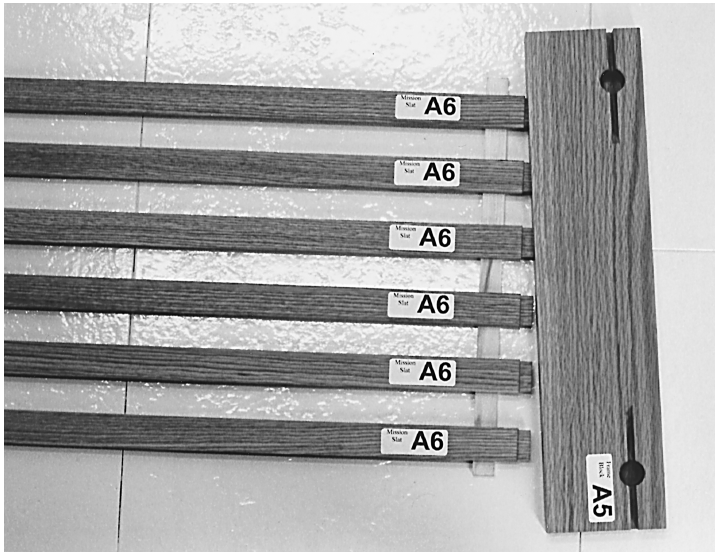

Insert other ends of the Slats into Frame Block. Angle Frame Block as shown, and insert Slats one at a time, starting at one end.

Make sure Slats are seated into Frame Blocks. If necessary, stand Block and Slat Assembly up, and gently tap on Frame Block with your hand to seat the Slats.



The Block and Slat Sub-Assembly should look like this when assembled.

Repeat procedure for the 2nd Block and Slat Sub-Assembly