



## Monitor Shelf Assembly

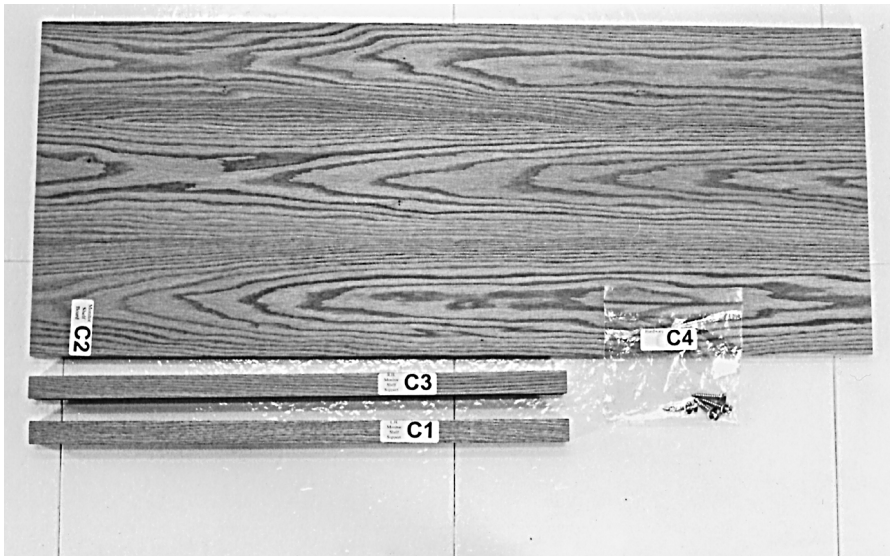

Locate the following parts:


- (1) pc C1 L.H. Monitor Shelf Support
- (1) pc C2 Monitor Shelf Board
- (1) pc C3 R.H. Monitor Shelf Support
- (1) bag C4 hardware

Note: C2 Monitor Shelf Board may consist of 2 boards, connected with a spline. These boards will be wrapped in plastic.

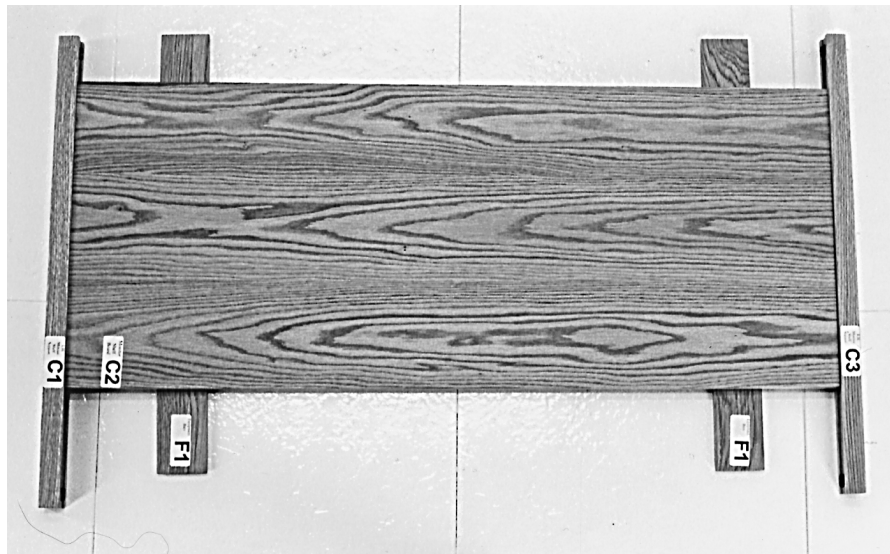

Arrange parts C1, C2 and C3 as shown.

Place (2) F1 Equipment Bars underneath the C2 Monitor Shelf Board.

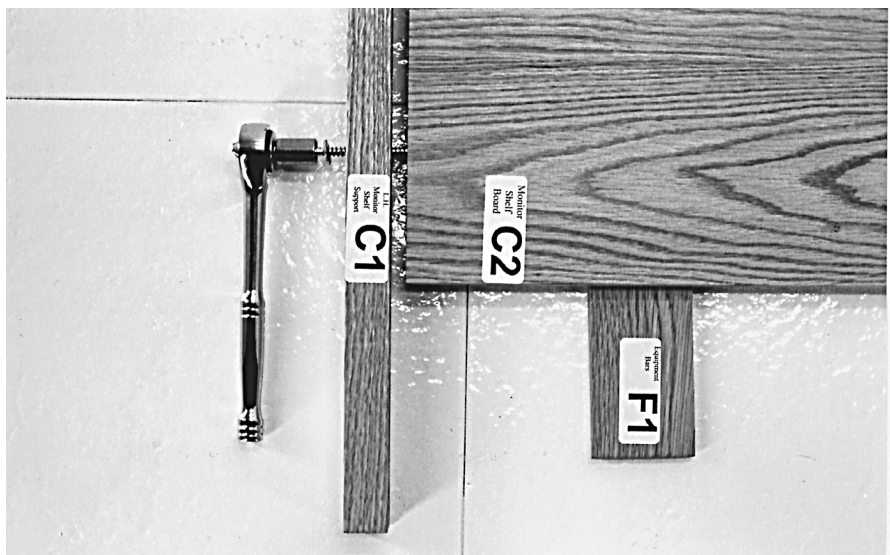

Attach C1 and C3 Monitor Shelf Supports to the C2 Monitor Shelf Board. Use (4) screws with (1) washer under the head of each from the C4 hardware bag. Wax screws prior to insertion.

Make sure the C2 Monitor Shelf Board fits into the slots in the C1 and C3 Monitor Shelf Supports (see photo next page).

Tighten screws with 7/16" socket wrench.